


In-line remote

Response to in-line remotes on connected headsets may be enabled or disabled by your choice.

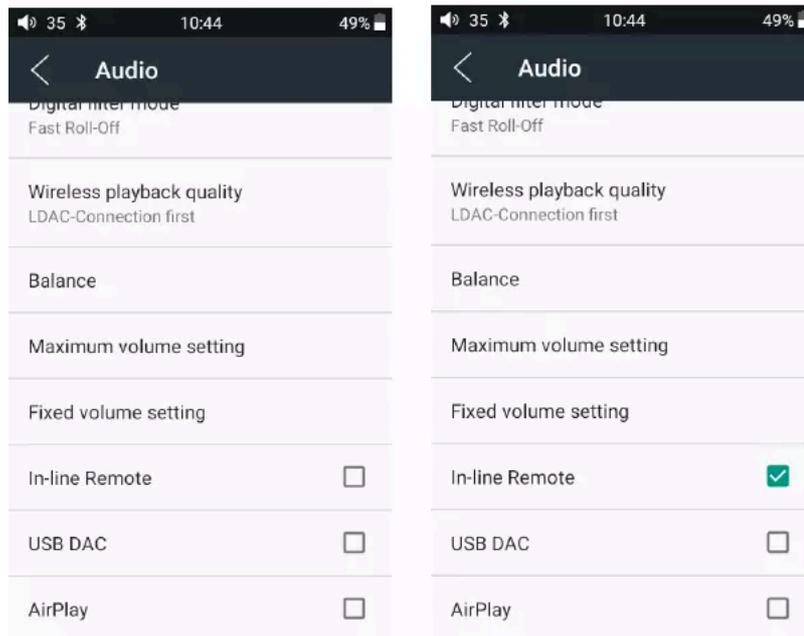

USB DAC

Check “USB DAC” and connect the M6 with computer via USB cable. (If you’re using Windows system, please install the driver at https://www.fio.com/Driver_Download; MAC system doesn’t need to install the DAC driver.

